

OWNER'S MANUAL

Chair/Couch Mounting Accessory Kit

This kit contains everything you need to easily use a ButtKicker® Advance low frequency audio transducer.



Before beginning, please make sure you have the following:

- One mounting plate.
- Four 1/4" x 3/4" carriage bolts.
- Four star washers.
- Four acorn nuts.
- Five rubber isolators for use under the furniture's other legs.
- Five #10 screws.
- One wrench.
- ButtKicker® Advance low frequency audio transducer. Sold separately.
- ButtKicker® BKA300-4 Power Amplifier. Sold separately.
- A/V processor. Sold separately
- Optional – Philips head screw driver. Not included.

ButtKicker®

Feel what you've been missing...

Attach the ButtKicker® Advance to the Mounting Plate

1. Place the ButtKicker® Advance on the Chair / Couch Mounting Plate so that the four feet of the ButtKicker® Advance base rest snugly into the four grooves in the Chair / Couch Mounting Plate that are opposite of the rubber pad. Make sure that the speaker wire connections on the ButtKicker® Advance are facing out, away from the mounting plate.
2. Insert the carriage bolts from the bottom of the Chair / Couch Mounting Plate so that the threads are sticking up through the base of the ButtKicker® Advance. **DO NOT** insert the bolts down through the ButtKicker® Advance. Be sure that the square shoulder on each carriage bolt fits into the square hole in the Chair / Couch Mounting Plate.
3. Place one star washer on each bolt and then tighten an acorn nut onto each carriage bolt. A wrench is provided for your convenience. Make sure to tighten each nut firmly.

Positioning the Mounting Plate with Your Furniture

- If your furniture only has four legs (or feet), then the mounting plate can be located under one leg at any corner.
- If your furniture has six or more legs, then the mounting plate ideally should be located under the center leg on the rear of the furniture. It can also be located under any one leg at any corner.

Note: With some longer couches, placing the ButtKicker® Advance and mounting plate at one corner will mean that the person sitting on that end of the furniture may experience slightly more shake than those seated in the center and farthest away seats. This is normal and may vary according to the size, type and construction of your furniture.

- There may be enough free space under the furniture to hide the ButtKicker® Advance “inside” the furniture. You may have to remove or cut the dust cover to see if this space exists on your furniture. Make sure there is enough airflow to allow the ButtKicker® Advance to stay cool and that the ButtKicker® Advance is not in contact with any of the furniture’s fabric, padding, etc.

- If there isn't enough space under the furniture, the ButtKicker® Advance will extend to the side or rear of the furniture. The mounting plate was designed to make this as unobtrusive as possible.

Using the Rubber Isolators Under Your Furniture's Other Legs

VERY IMPORTANT

We cannot stress how important it is to the performance of your system that you use the supplied rubber isolators under the other legs of your furniture. Regardless of whether the furniture is on a hardwood, tiled or carpeted floor, on a slab or a floor with a crawl space or basement underneath, using the supplied rubber isolators will dramatically improve the performance of the ButtKicker® Advance.

Additionally, use of the isolators will help reduce any vibration from your furniture from being transmitted throughout the rest of your home or apartment.

Using the Rubber Isolators Under Your Furniture's Other Legs

- Start by putting one isolator under each corner leg and then use the rest of the isolators for any additional legs that are unsupported. The isolators can be slid under the legs without using the screws.
- However, if possible, use the supplied screws to screw the isolators into the legs.

Connecting the ButtKicker® Advance to Your ButtKicker® BKA300-4 Power Amplifier and A/V Processor:

- Follow the directions that came with the ButtKicker® Advance and ButtKicker® BKA300-4 Power Amplifier to connect the ButtKicker® Advance to the rest of your home theater system.



If you have questions or need technical support,
please contact The Guitammer Company, not
the store where you purchased the product.

The Guitammer Company

1-888-676-2828 / 1-614-898-9370
8:30 AM to 5:30 PM EST

Email us at:
support@guitammer.com

Visit us on the web at:
www.thebuttkicker.com

More Information

Visit www.thebuttkicker.com for support, FAQs, more information and details on other ButtKicker® brand products and accessories.

Limited Warranty

This Guitammer Company product is warranted against defects in materials and workmanship for a period of one (1) year from the date of purchase by the original end-user. Items returned for repair under warranty will be repaired or replaced at the sole discretion of The Guitammer Company without charge for materials or labor, providing such items are returned for inspection, transportation prepaid, to The Guitammer Company or an authorized service center. All repaired or replaced items will be returned freight collect. Warranties do not apply to products that have been subjected to abuse, accident, modifications, improper handling or installation, or repairs made by anyone other than The Guitammer Company or an authorized service center. The Guitammer Company shall be the final authority in the determination of all warranty service claims.



THE GUITAMMER COMPANY
...leaders in low frequency sound...

ButtKicker®
Feel what you've been missing...